



## MANUAL TRAY SEALER

### E 193

Practical and space-saving, this manual tray machine seals a hermetic film that fits the tray perfectly. It is equipped with a potentiometer for temperature control.

Maximum tray size: 270 x 190 mm

E 193



#### Uses



Catering  
professions



Groceries &  
supermarkets



**Optional:** made-to-measure mould to fit  
to your trays formats.



- ✓ Compact and easy to use, for sealing trays up to a maximum size of 270 x 190 mm.
- ✓ Double handle system for easy and regular sealing.
- ✓ Stainless steel structure for easy cleaning and better resistance to disinfectants (reduces retention zones).



**1 year warranty<sup>(1)</sup>**

<sup>(1)</sup>Except wear parts



**Compatible materials**  
Bio-sourced or compostable



**Compliance with  
CE standards**

# FOOD range

## TECHNICAL DATA

| MODEL        |  |  |  |  |  |  |  |
|--------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <b>E 193</b> | 58,5 x 25 x 55,9 cm                                                               | 190 mm (max)                                                                      | 200 mm (max)                                                                      | potentiometer                                                                     | 10,5 kg                                                                             | 600 W                                                                               | 230 V 50/60 Hz                                                                      |

\* Dimensions open cover

## EQUIPMENT

Manual closure with double handles




Temperature control by potentiometer

Integrated roll holder

## ADAPTED TOOLS

### MOULD

Options: made-to-measure mould for other tray dimension (please contact us).

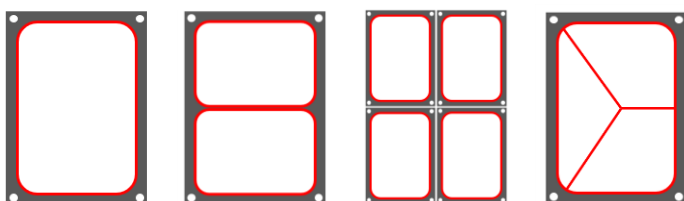

### TRAY

Max. tray height




## OPERATING PRINCIPLE




1 Place your tray and its contents on the mould.



2 Unroll the film over the tray.

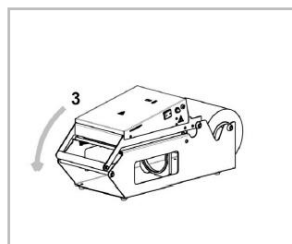


3 Lower the handle to cut and seal the film.

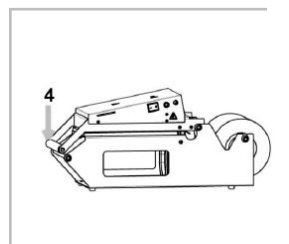

4 Keep the 2 handles pressed together for a few seconds.

5  
= 3s

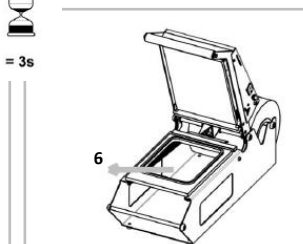

6 The tray is sealed and ready to use.

Need more information?



Contact the sales department: +33 (0)4 74 00 59 54